
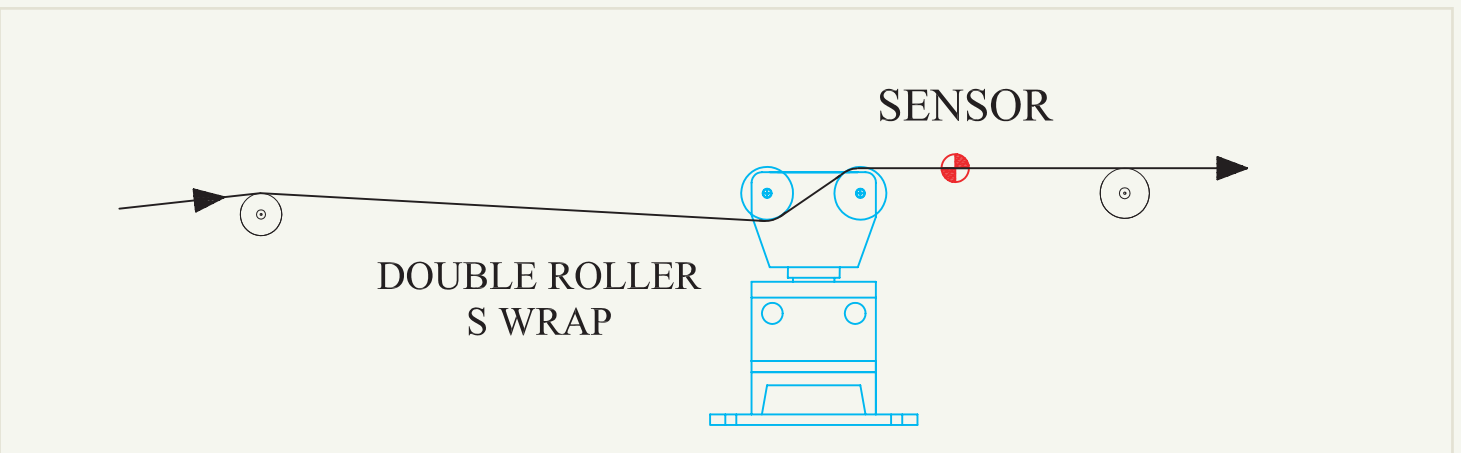


# Typical Steering Guide Installation and Threading Options

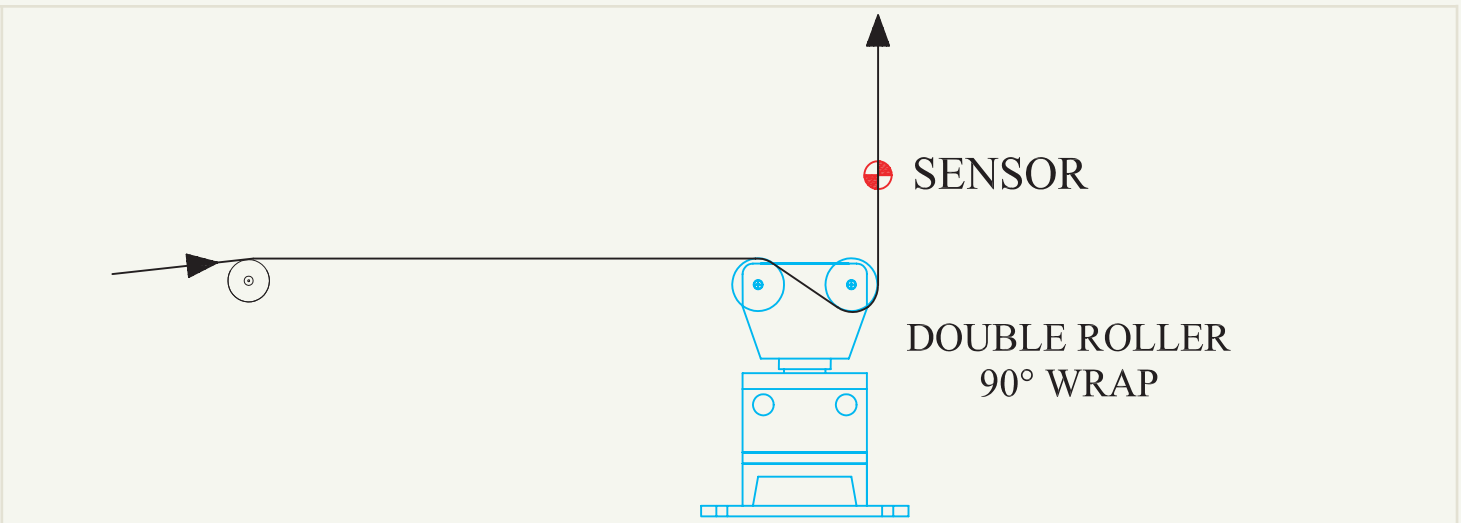

\* Note: The air-flow sensor should be located as close to the exiting guide roller as possible and within the first 1/3 of the exiting span.