


Installation & Threading Options


For Displacement Guides

COAST

CONTROLS

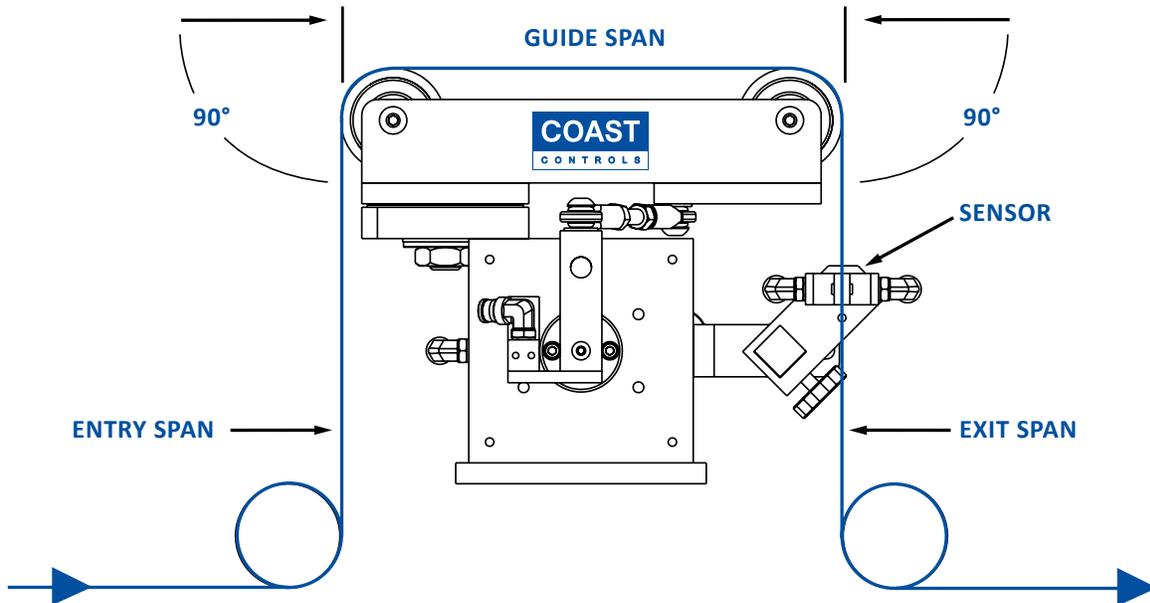

- Entry and exit spans must be parallel to each other and perpendicular to the plane of the guide's motion.
- Web must enter and exit the guide at a 90° angle. Guide span must be approximately $1\frac{1}{2}$ - 1x's the maximum web width.
- The air-flow (edge) sensor must be securely mounted after the guide's exit roller and within the first 1/3 of the exit span.
- At least one idler roller must be located between the exiting guide roller and the process (printing, laminating, etc.).

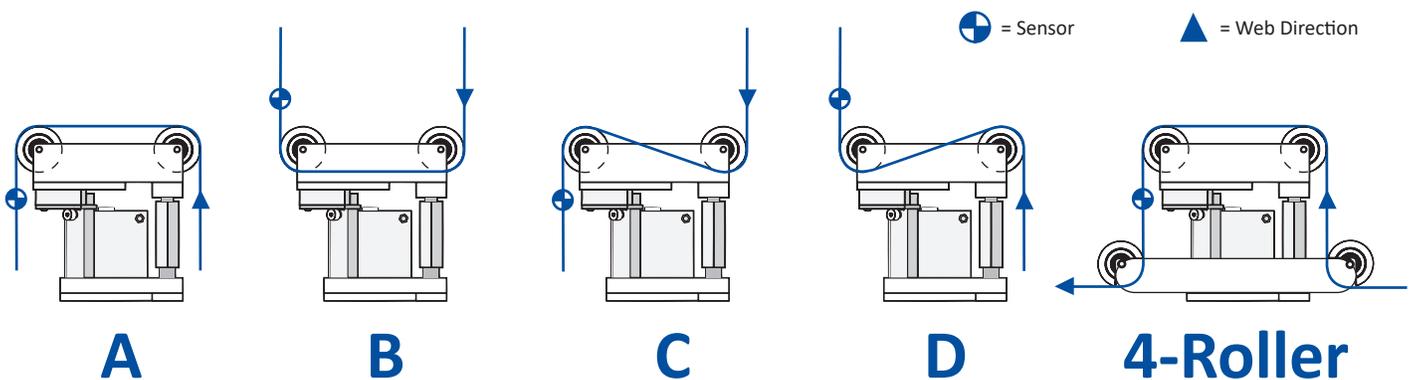

Guides can be placed in any orientation and sensor can be on either the near side or far side of the web. Dual sensor to center-guide is optional.

